Background

A leading global bioscience logistics specialist company were approached by a pharmaceutical manufacturer client who wanted to ship a full pallet of +2°C to 8°C product from Belgium to Iceland. Their current solution was expensive and the exteme cold temperatures sometimes found in Iceland were giving them difficulties.

Discussions

Various discussions took place between the logistics provider and Peli BioThermal. CoolPall™ Flex, CoolPall™ Vertos and the companys Crēdo™ on Demand rental options were considered. CoolPall Flex was deemed too small for the consignment and with the shipment going to Iceland, the client did not want to have to return a rental container, so CoolPall Vertos was selected.

Product Challenge

The client considered that standard CoolPall Vertos qualification performed marginally to their winter profile and had concerns that the sub zero conditions in Iceland would potentially lead to a cold excursion.


Solution

Peli BioThermal offered an alternative pack out, removing some of the -18°C coolants and replacing them with +5°C coolants. This was a pack out that the company had trialled previously in their laboratory which had shown good results so the client was advised accordingly.


Result

Following the change of packout, the consignment was shipped successfully, with no excursions. Both the logistics provider and the client were extremely happy. with the performance of the CoolPall Vertos and the experience will give them confidence for future, similiar shipments. CoolPall Vertos not only worked extremely well thermally but also gave a significant cost saving over alternative solutions.

Internal Temperature

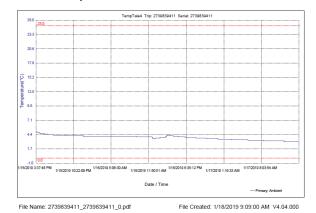

External Temperature

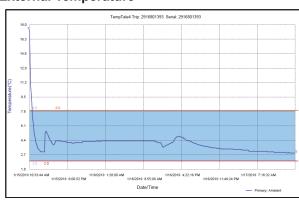

About CoolPall™ Vertos

CoolPall Vertos is the next generation of high performance bulk shipping systems from Peli BioThermalTM. This durable bulk shipper has been designed and tested with the ability to be flat-packed, modular, easy and quick to assemble.

Available in 1/4PMC, ISOPAD, 1/2PAG and 1/2PMC sizes and 2 temperature ranges, +2°C to +8°C and +15°C to +25°C. CoolPall Vertos offers best in payload to volume ratios and durations in excess of 120 hours.



FOR MORE INFORMATION ABOUT PELI BIOTHERMAL PRODUCTS, PLEASE CONTACT: INFO@PELIBIOTHERMAL.COM T: +44 (0)1525 243 770 PELIBIOTHERMAL.COM

Golden Hour™, TIC™, Crēdo Tube™, Crēdo ProEnvision™, Crēdo Xtreme™, Crēdo Duracube™, Crēdo ProMed™, Sherpa™ Systems, CoolGuard™ PCM, CoolGuard™ Advance and CoolPall™ Vertos are registered trademarks of Pelican Products, Inc., its subsidiaries and/or affiliates.