



**PELI**  
**BIO THERMAL™**

# Crēdo PROMED™

THERMAL PACKAGING SOLUTIONS



## THERMALLY PROTECTED MEDICAL TRANSPORTERS

Designed specifically for the dynamic needs of pharmaceutical reps and first responders, the Crēdo ProMed™ product line currently consists of three different sized temperature-controlled portable medical transport bags that thermally protect the integrity of valuable pharmaceutical samples and medical supply payloads for 72 - 96 hours.

The outer bag is constructed of highly durable ballistic nylon fabric and the patented TICtm panels with phase change material and VIP components contained within, are qualified to consistently protect medical materials such as blood, platelets, and commercial bio-pharma product samples within two ranges (2-8°C and 15-25°C).

## MATERIALS



### Outer Container:

Ballistic Nylon Fabric with high quality faux leather trim accents and durable web strapping and secure buckles

### Colour Options:

Standard Tan\*

\*Other colours available upon request



### DURATION

72 - 96 Hours



### TEMPERATURE

#### SERIES 4

2°C to 8°C

#### SERIES 22

15°C to 25°C



### VOLUMES

2L, 4L, 8L



2 LITRES  
PAYLOAD



4 LITRES  
PAYLOAD



8 LITRES  
PAYLOAD



# CRÉDO PROMED™ SERIES PRODUCT SPECIFICATION

In response to an identified need by pharmaceutical clients, we developed a dependable, easy-to-use “load and go” thermal protection soft-side bag.

The Crêdo ProMed™ is the same patented passive thermal protection technology that is part of the Crêdo Cube™ product family and is now available in three convenient payload volume sizes. These hand portable, highly durable and convenient to use soft-sided bags offer:


**Easy conditioning** of the TIC™ system panels which makes the ProMed a simple, nimble, and consistently reliable option. Once the TIC™ system panels are staged and properly placed inside the VIP (vacuum insulated panels) assembly, simply insert payload content and be on your way

**Rugged and sturdy** supportive interior side panels, double-stitched seams, reinforced protective corners, durable buckle straps, comfortable padded shoulder strap and a water and soil resistant protective bottom panel

**A sophisticated design** with a clear view pocket for business essentials and a sturdy elastic back strap designed to slip effortlessly over telescoping handles enabling secure transport on top of wheeled bags

	Payload Size	Litres	Exterior Dimensions WxDxH		Interior Dimensions WxDxH		Tare Weight	
			mm	inches	mm	inches	kg	lbs
Series 4	Series 4	2L	257 x 235 x 210	10 x 9 x 8	152 x 127 x 108	6 x 5 x 4	4	8
	Series 4 472	4L	292 x 292 x 279	12 x 12 x 11	150 x 150 x 150	6 x 6 x 6	5	12
	Series 4 872	8L	406 x 286 x 286	16 x 11 x 11	282 x 165 x 165	11 x 7 x 7	8	18
Series 22	Series 22C	2L	257 x 235 x 210	10 x 9 x 8	152 x 127 x 108	6 x 5 x 4	4	8
	Series 22C 472	4L	292 x 292 x 279	12 x 12 x 11	150 x 150 x 150	6 x 6 x 6	5	12
	Series 22C 872	8L	406 x 281 x 286	16 x 11 x 11	282 x 165 x 165	11 x 7 x 7	10	22

## ADDITIONAL DATA

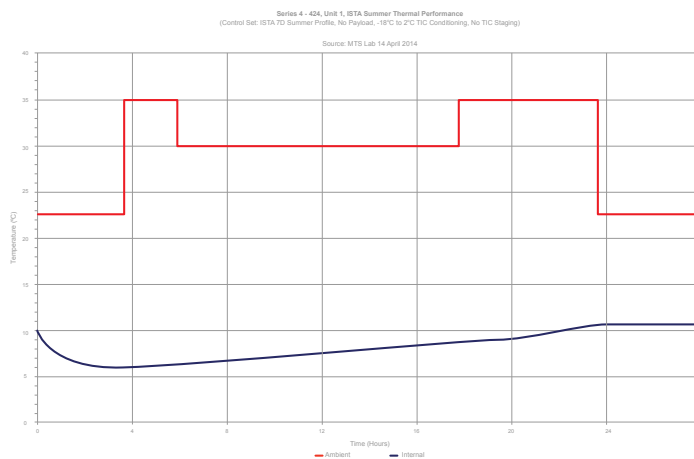

FOR MORE INFORMATION ABOUT PELI BIOTHERMAL PRODUCTS [CLICK HERE](#)

FOR MORE INFORMATION ABOUT PELI BIOTHERMAL PRODUCTS, PLEASE CONTACT:

EMEA OFFICE - INFOEMEA@PELIBIOTHERMAL.COM T: +44 (0)1525 243 770

AMERICAS OFFICE - INFOAMERICAS@PELIBIOTHERMAL.COM T: +1(763) 412-4800 TOLL FREE US: T: +(877) 537-9800

ASIA OFFICE - INFOASIA@PELIBIOTHERMAL.COM T: +65 6681 0095

PELIBIOTHERMAL.COM

ISO17025, ISO9001-2008 Accredited

Golden Hour™, TIC™, Crêdo™, Crêdo Cube™, Crêdo ProEnvision™, Crêdo Xtreme™, Crêdo Duracube™, Crêdo ProMed™, Sherpa Systems™, CoolGuard™ and CoolPall™ are registered trademarks of Pelican Products Inc., its subsidiaries and / or affiliates



©2022 Peli BioThermal Ltd all rights reserved